

INSTALLATION INSTRUCTIONS FOR 4179

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

READ AND SAVE THESE INSTRUCTIONS

ASSEMBLING THE FIXTURE (Fig. 2)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Adjust the arms (N, O) so that they are at equal distance from each other.
4. Thread the center column assembly nipple (K) through the tube (L) and onto the coupling (M).

HANGING THE FIXTURE (Fig. 1)

5. Thread the nipple (E) into the ceiling loop (H) until snug.
6. Thread hex nut (D) onto nipple (E) and place lock washer (C) over end of nipple (E).
7. Thread other end of nipple (E) with loop attached into crossbar (A) until snug.
8. Take this crossbar (A) assembly and mount to ceiling junction box with mounting screws (B) (Size: #8-32*0.6"L). The side of the mounting bar marked "GND" must face out.
9. Using a pair of chain pliers open one link of chain (I) and connect it to the fixture loop (J).
10. By measuring, determine the correct number of chain links needed for the desired hanging height.
11. Lace the fixture wires through the chain links and slip screw collar ring (G) and the canopy (F) over the chain.
12. Open the chain link of the other end of the chain (I) and connect it to the ceiling loop (H).
13. Feed the fixture wires through the ceiling loop (H) and nipple (E) and pull until tight.

CONNECTING THE WIRES (Fig. 3)


14. At this point, connect the electrical wires as shown in Fig. 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate using the green screw provided. After the wires are connected, tuck them carefully inside the outlet box.

COMPLETING THE INSTALLATION (Fig.2)

15. Raise the canopy (F) all the way to the ceiling. Raise the screw collar ring (G) and thread onto ceiling loop (H) protruding through canopy (F). (Fig.1)
16. Install the light bulb(s) in accordance with the fixture's specification. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)** (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).

Your installation is now complete. Return the power to the junction box and test the fixture.

Fig.1

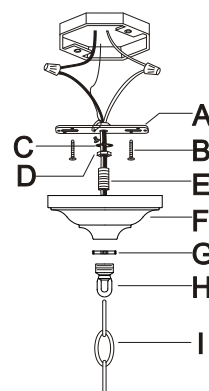

Chain # HCH2072-84
(4.0mm)

Fig.2



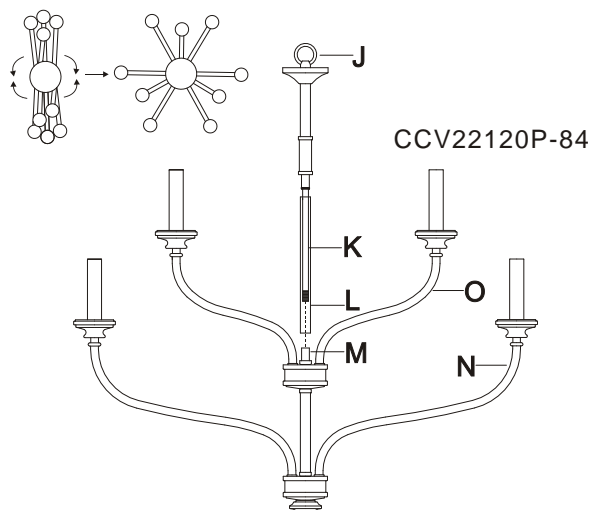


Fig.3

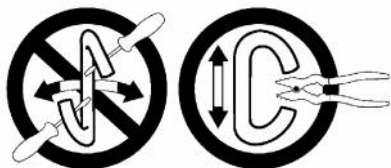

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

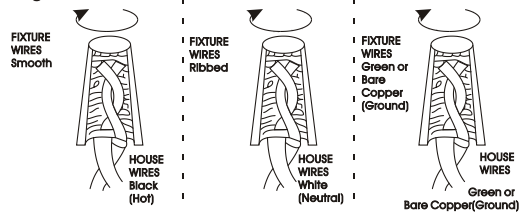